



# User Manual

# AVAA C214

# Optional feet



## TABLE OF CONTENTS

1	Introduction .....	3
2	Safety Instruction .....	3
3	Attaching the optional feet to the AVAA C214 .....	4
4	Attaching the optional feet to the AVAA C214 .....	5
4	Fixing the AVAA C214 to a wall or ceiling .....	6

## 1 Introduction

Thank you for the purchase of the optional feet for your AVAA C214. The optional feet allows you to put the AVAA C214 horizontally on the floor or to mount it on a wall or ceiling.

For the latest information, help or advice, please contact your local PSI Audio representative or PSI Audio directly.

**Relec S.A.**  
Rue des Petits Champs 11 a+b  
CH-1400 YVERDON (Switzerland)  
Tel : +41 (0)24 426 04 20  
Fax : +41 (0)24 426 04 51  
info@psiaudio.com  
www.psiaudio.com

## 2 Safety Instruction



Make always sure the device is secured adequately to avoid falls!

### 3 Box content


- 1x base stem
- 2x attachment feet
- 4x screws to fix the feet to the base stem
- 2x screws to fix the AVAA C214 to the feet
- 1x blue pick to remove the rubber rings on the AVAA C214
- 4x wall-mounting system including screw, washer and plug



### 4 Attaching the optional feet to the AVAA C214


#### 4.1 Take off the rubber rings

With the help of the blue pick, carefully remove the rubber rings on both sides of the AVAA C214.

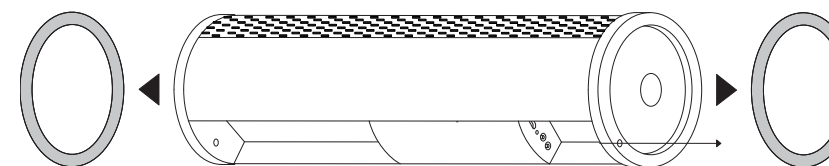


#### 4.2 Attach the optional feet to the AVAA C214

On a flat surface, carefully insert the AVAA C214 into the optional feet.

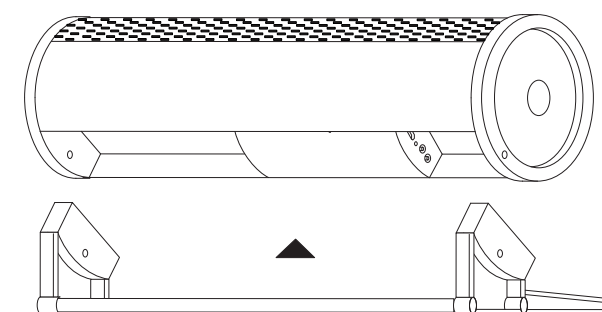


#### 4.3 Reassemble it

Use the 2 conical screws to secure the foot to the AVAA

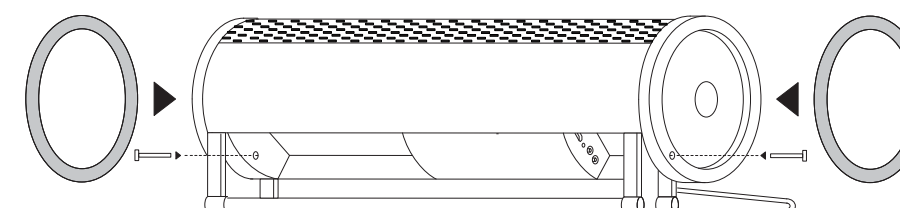

#### 4.2 Your AVAA can now be placed horizontally on the floor

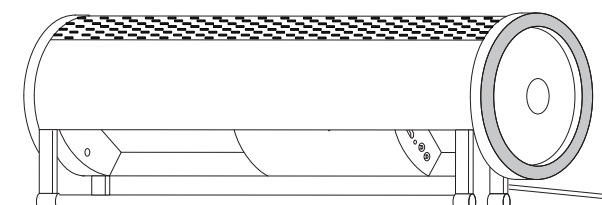

## 5 Fixing the AVAA C214 to a wall or ceiling

If you want to fix your AVAA C214 to a wall or ceiling, please note that you need first to fix carefully and securely the feet mounting system to the wall or ceiling prior to attach the AVAA C214 to it.

